




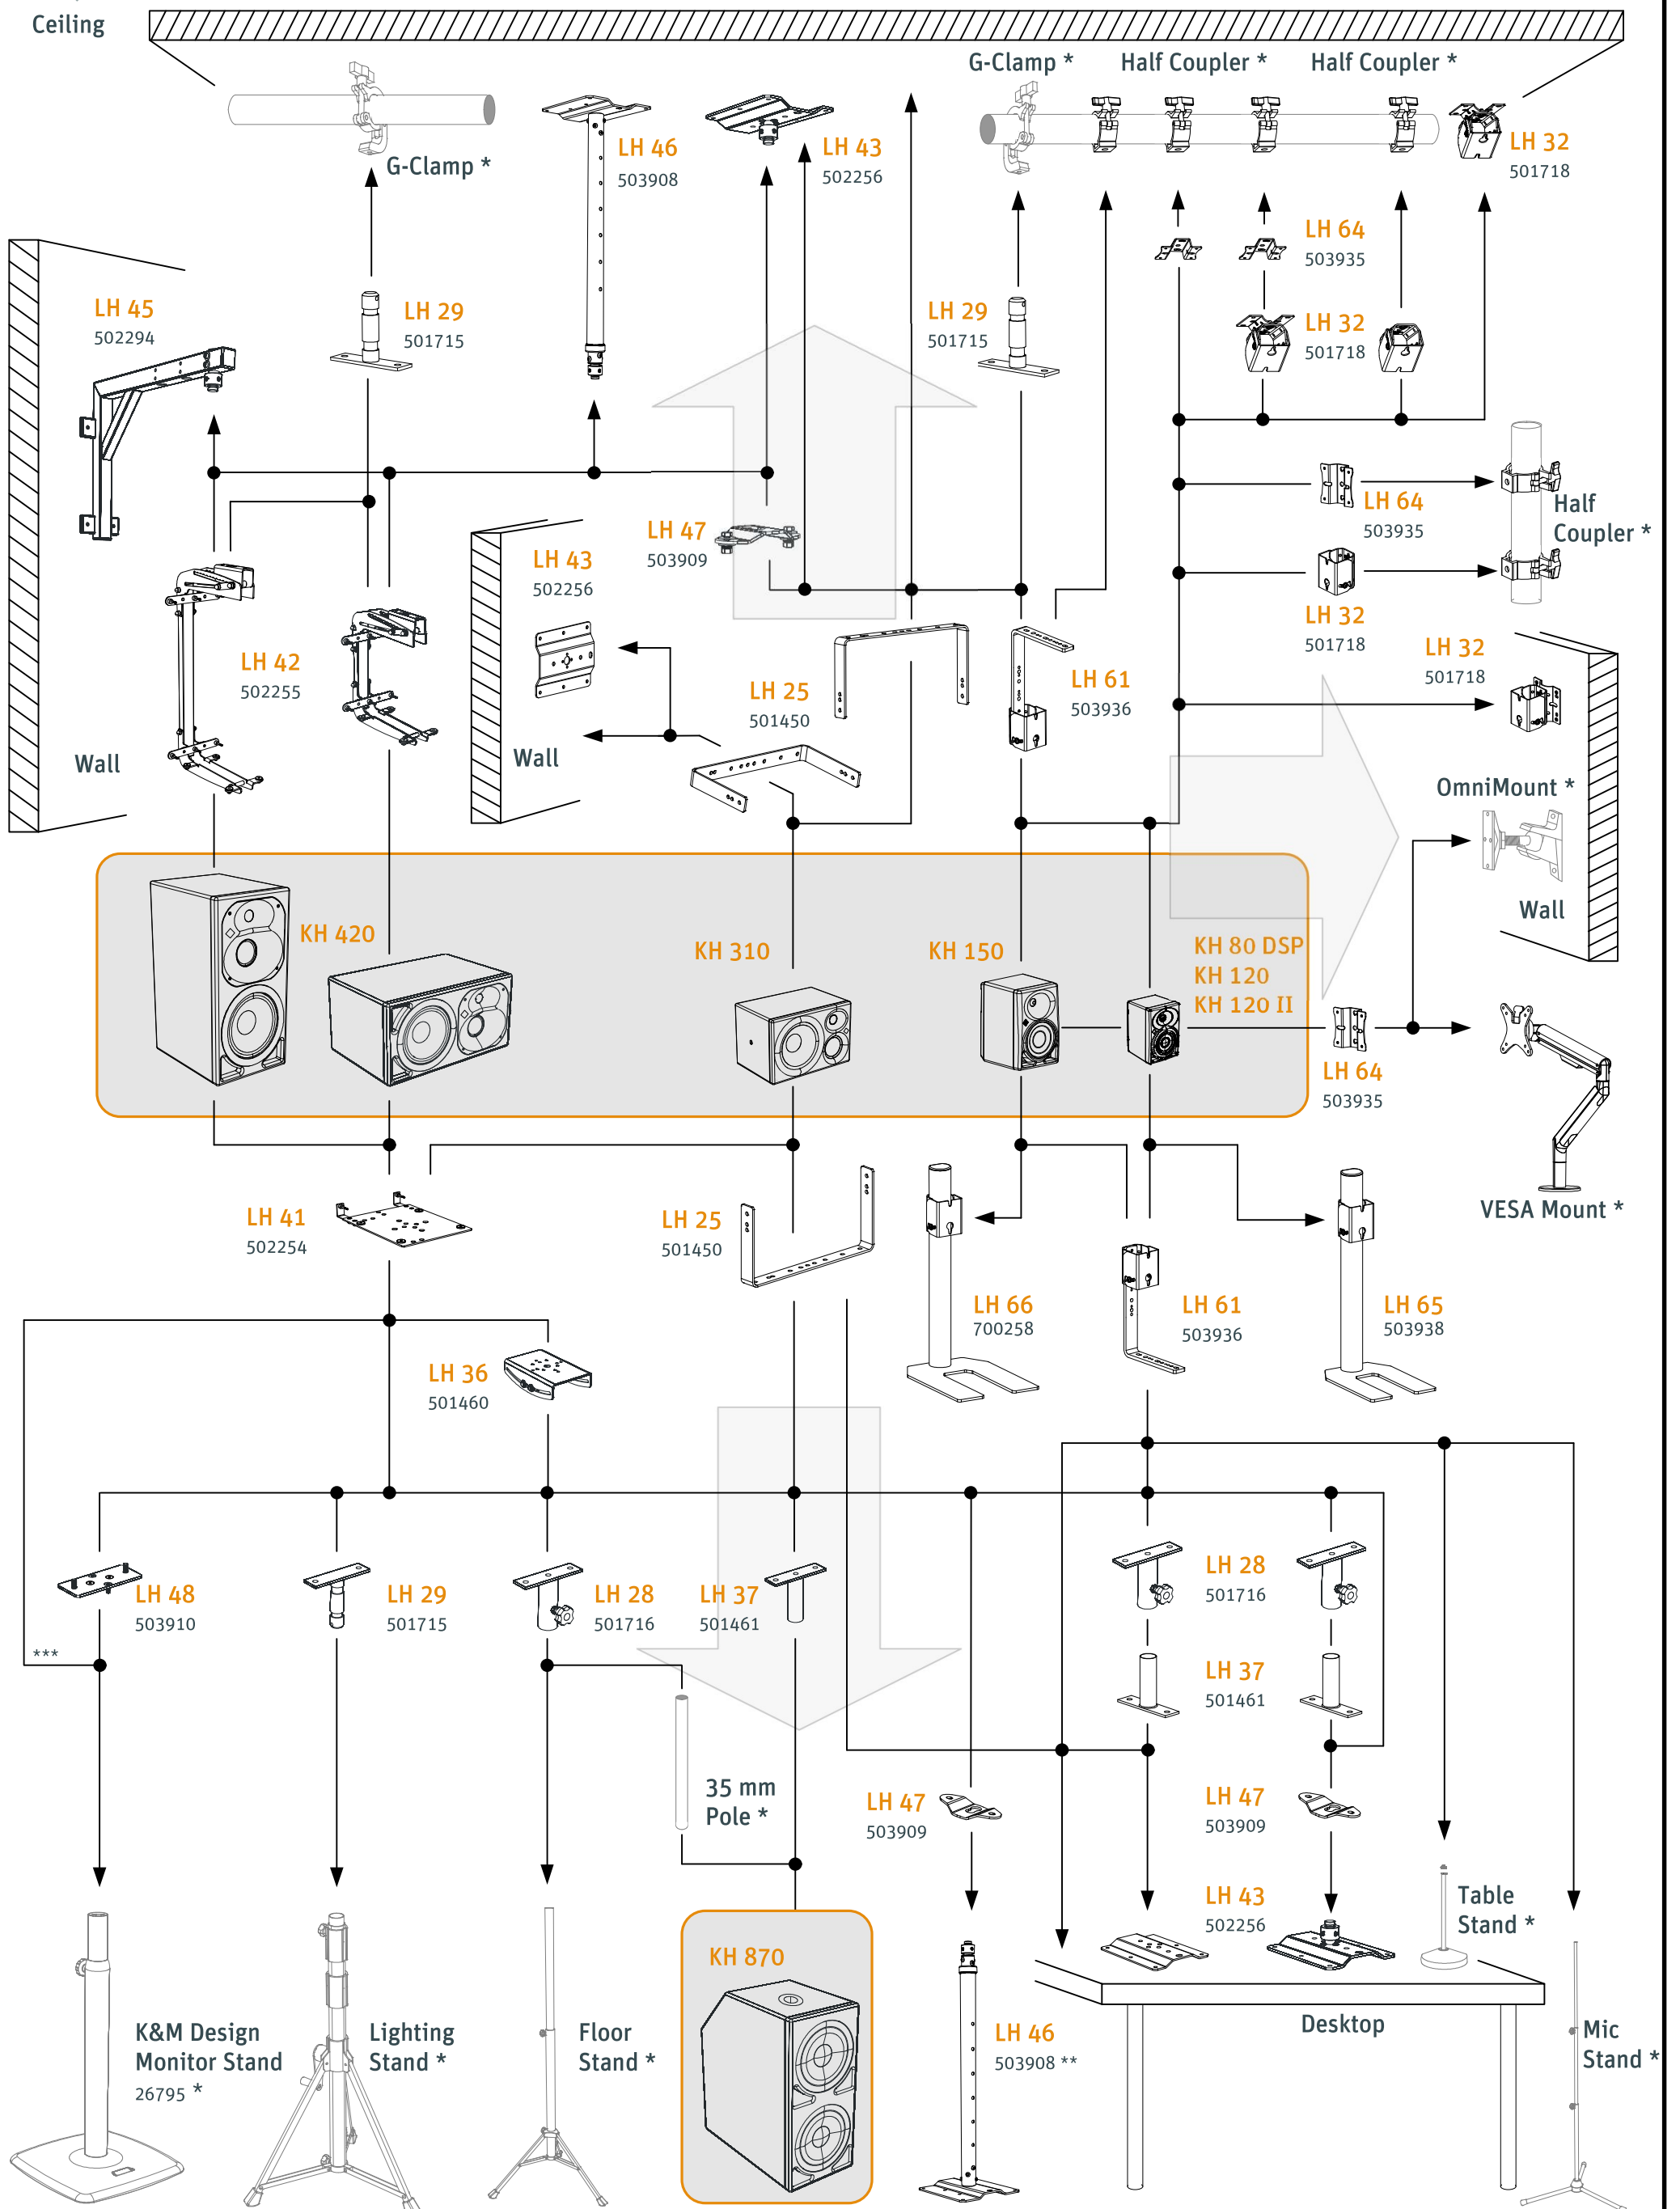


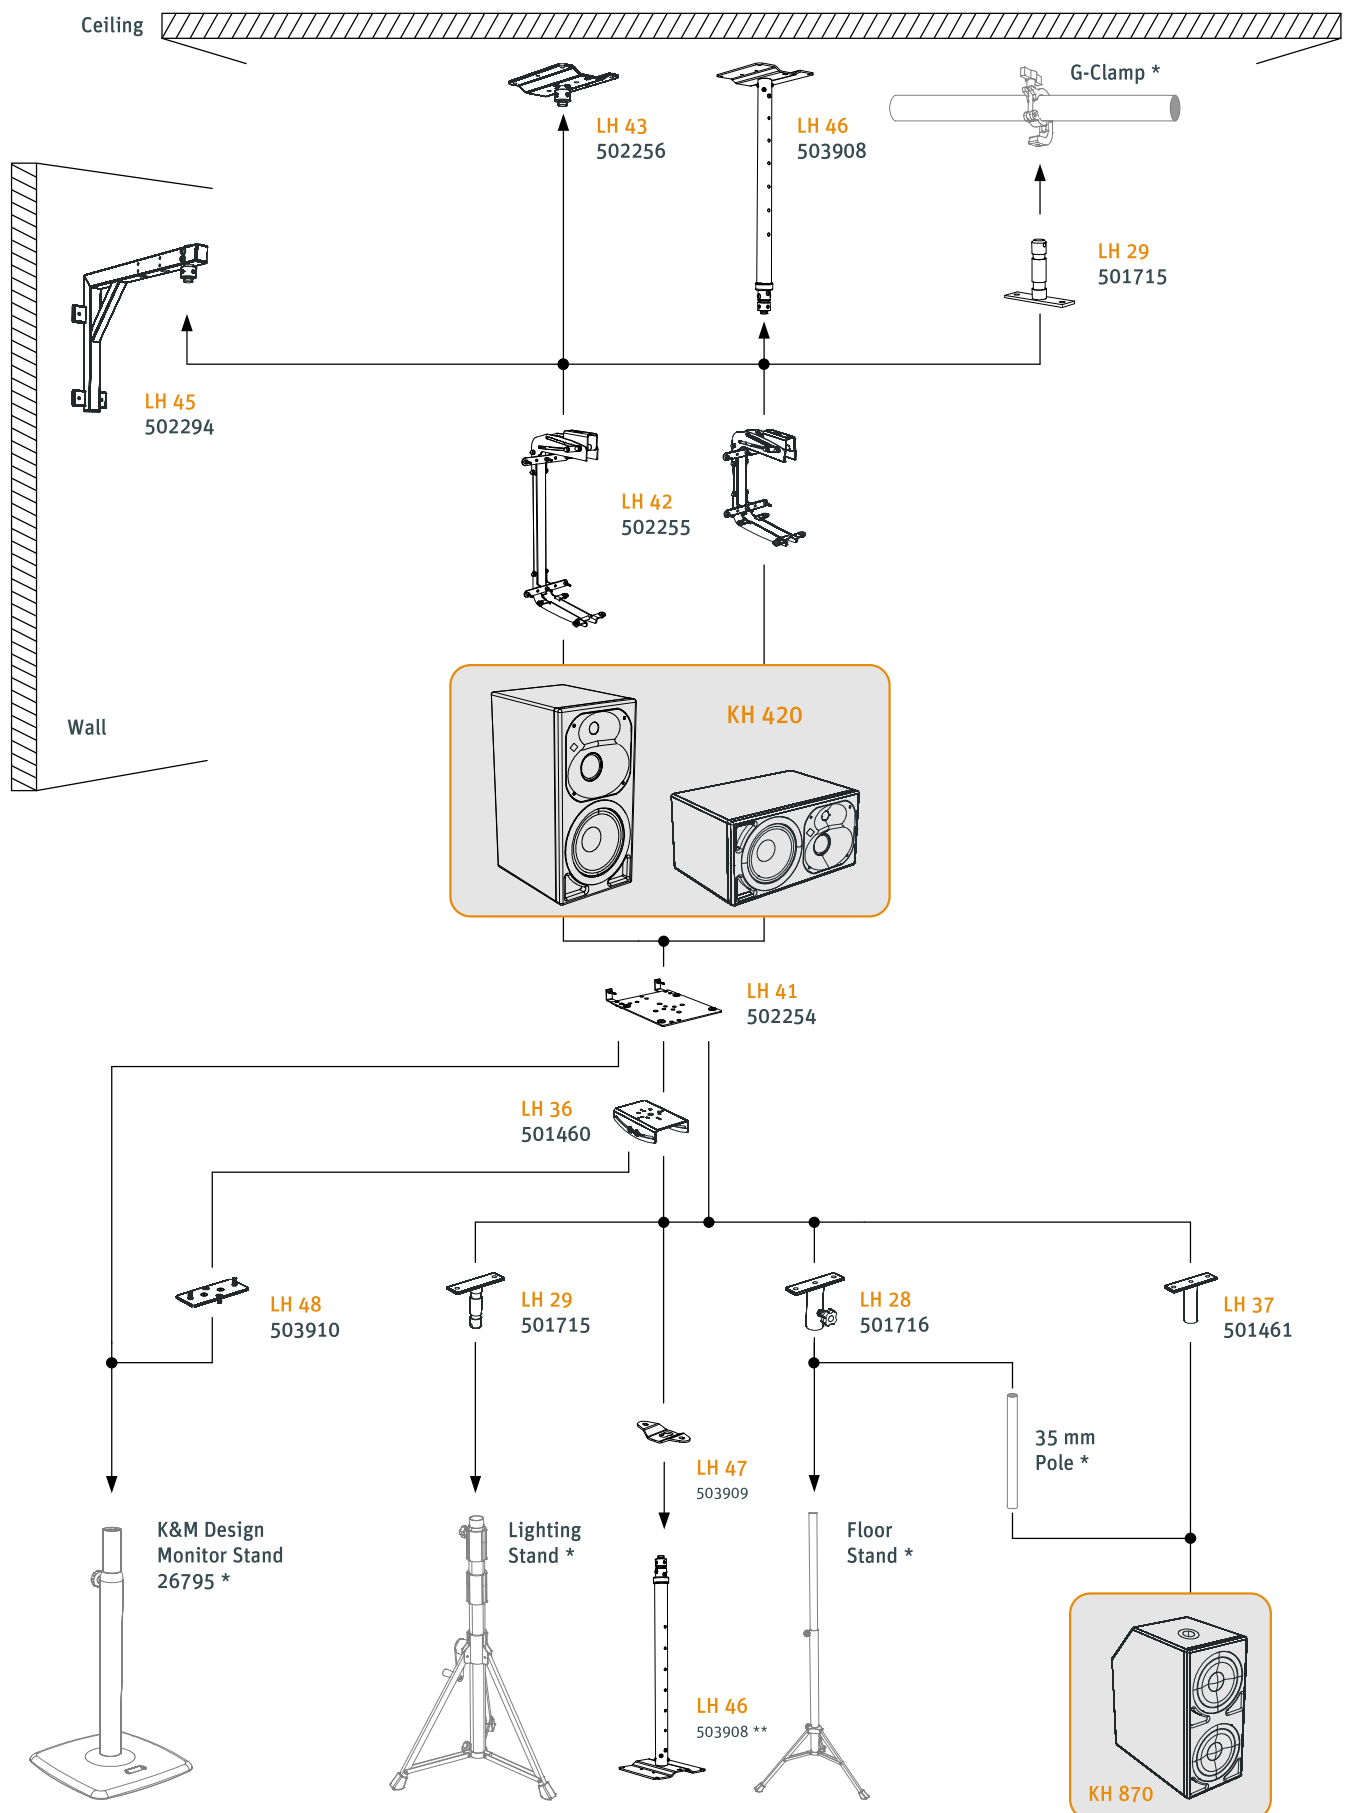


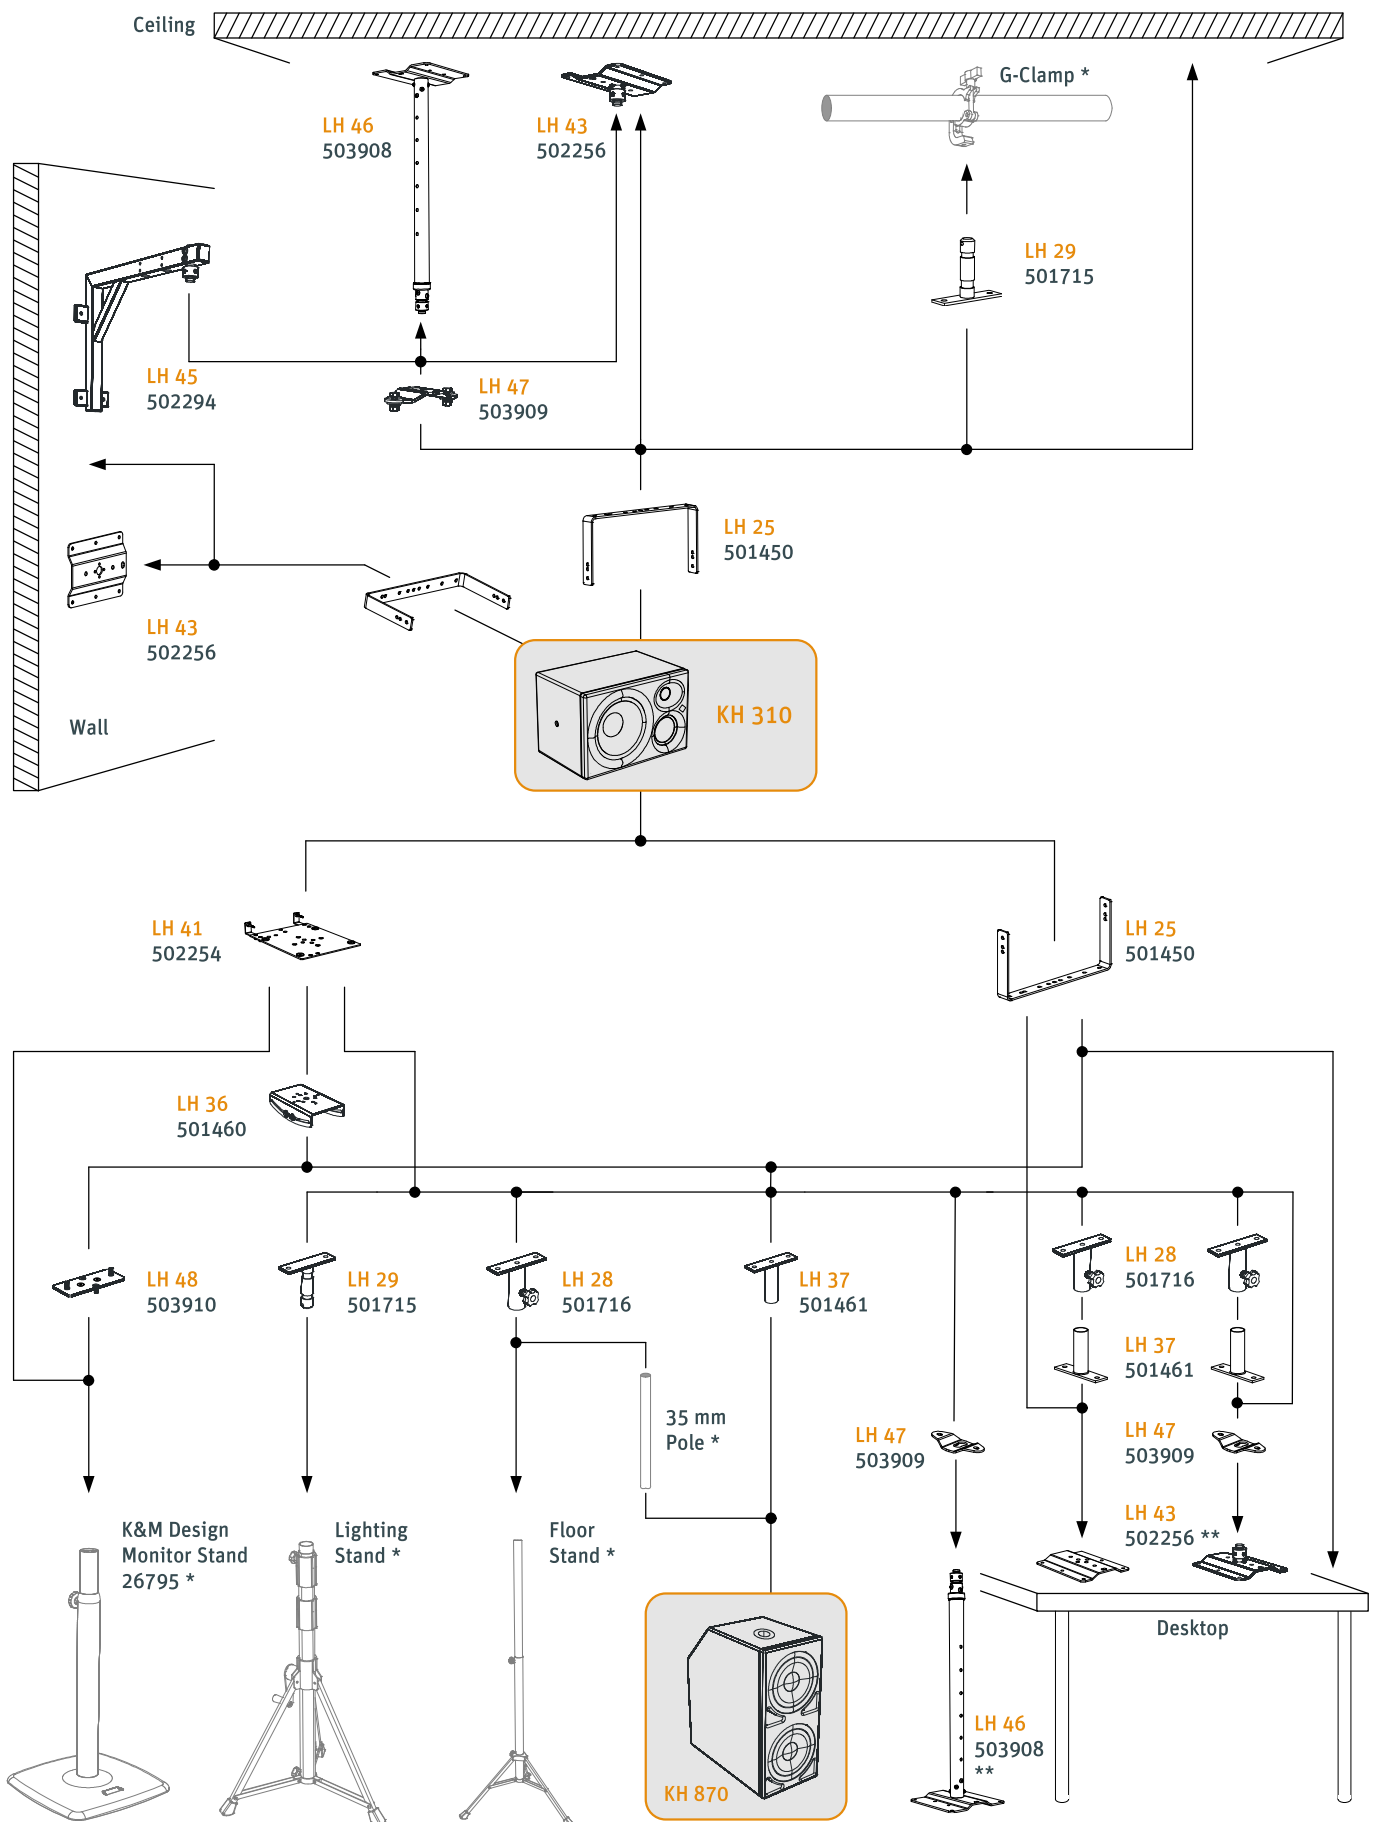

* Sourced from 3rd parties

** Must be screwed onto a solid surface

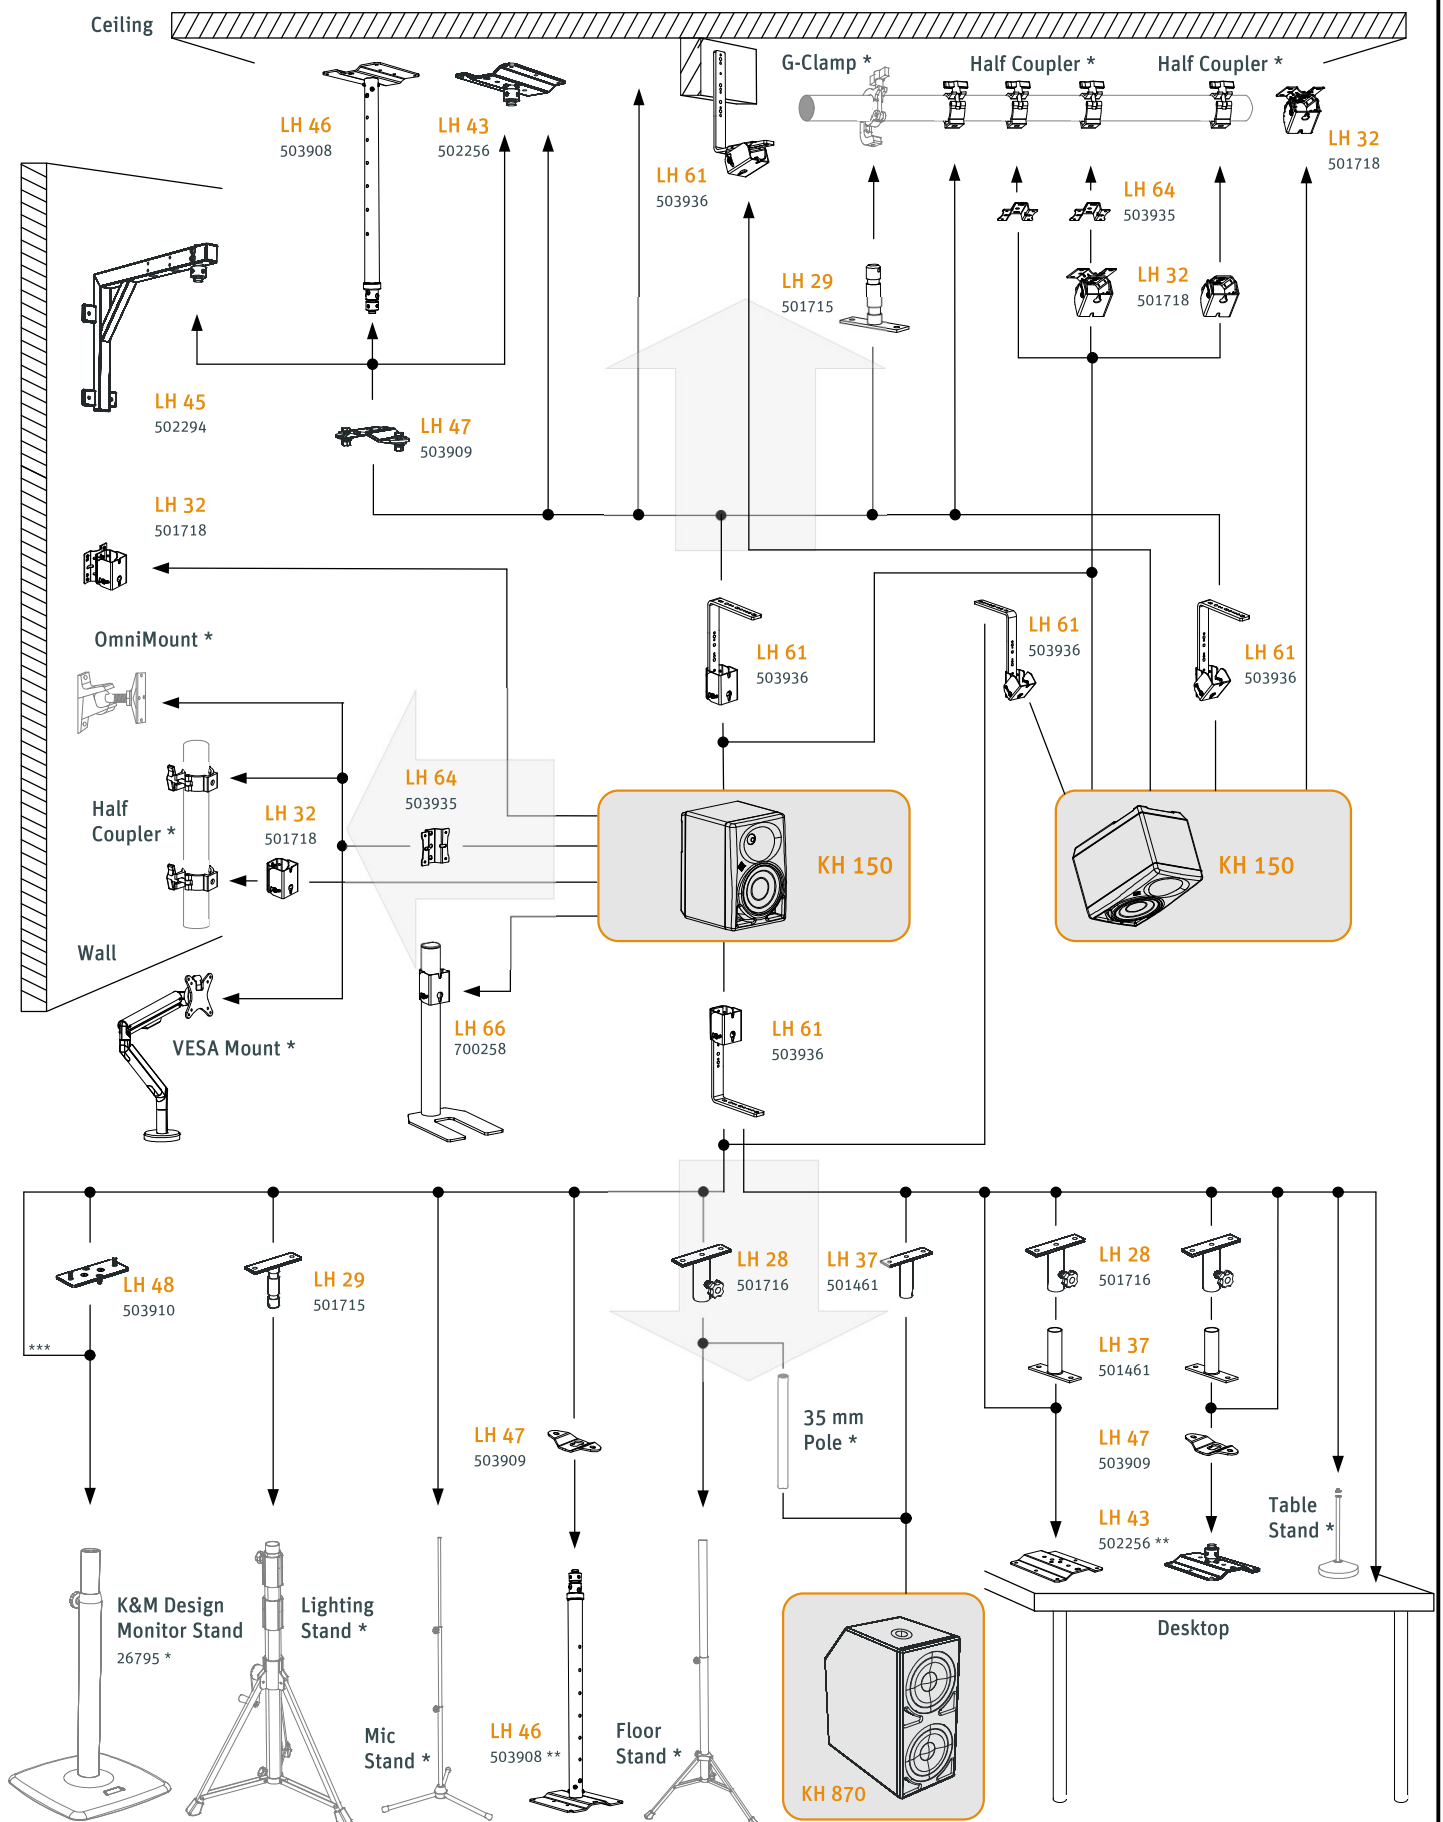

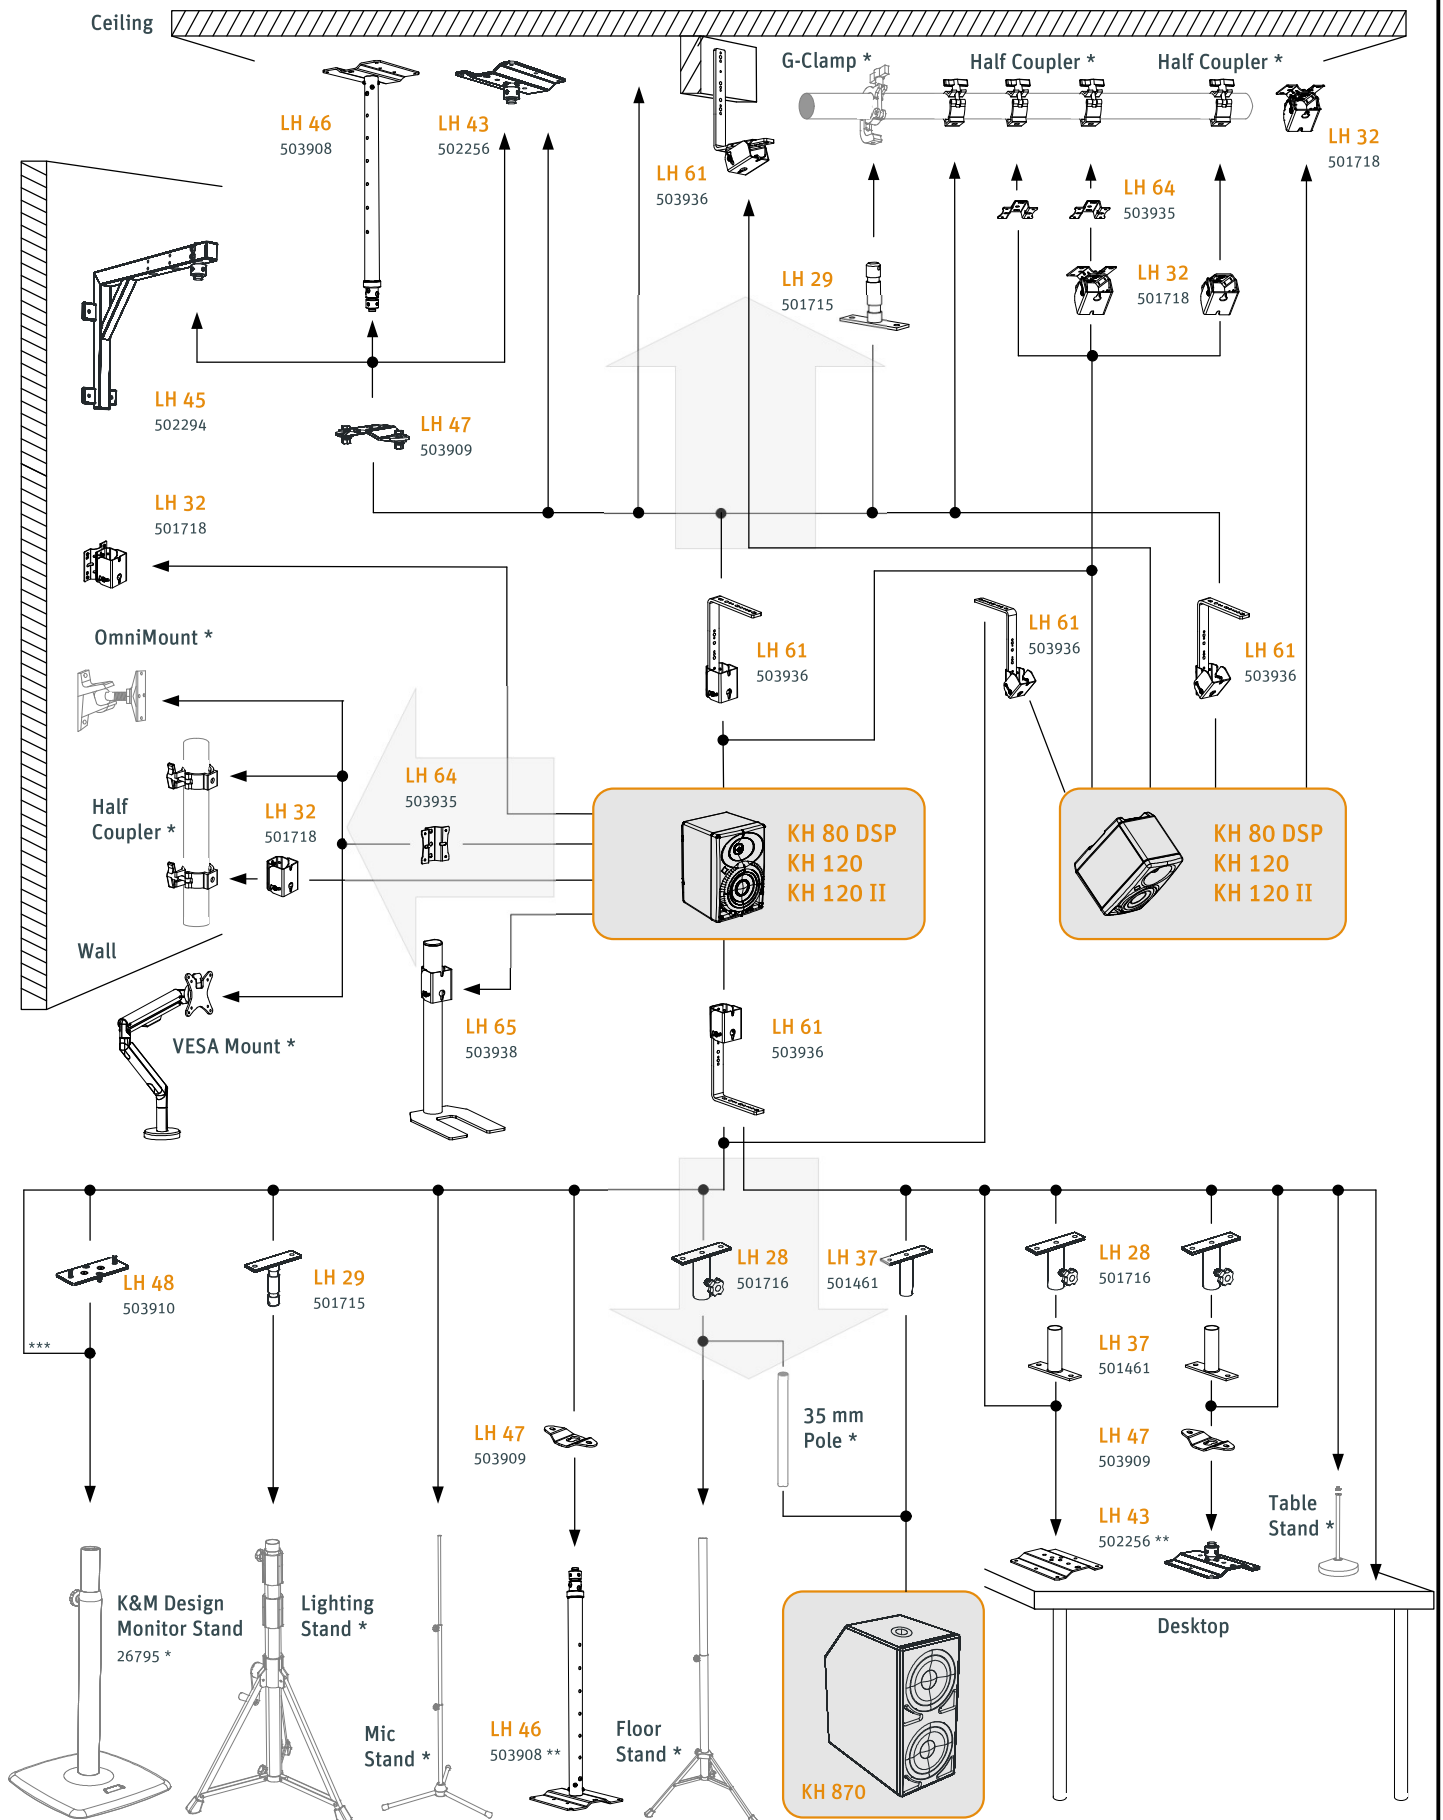

* Sourced from 3rd parties

** Must be screwed onto a solid surface

*** Without LH 48 design monitor stand must be turned by 90°

KH 420 Mounting on a floor stand (e.g. K&M 26750, 26735) KH 420 + LH 41 + LH 28 + stand KH 420 + LH 41 + LH 47 +LH 46 KH 420 + LH 41 + LH 46 + LH 47 +LH 46 KH 420 + LH 41 + LH 36 + LH 28 + stand Mounting on a design monitor stand (e.g. K&M 26795) KH 420 + LH 41 + K&M design stand KH 420 + LH 41 + LH 36 + LH 48 + K&M design stand Mounting on a lighting stand KH 420 + LH 41 + LH 29 + stand KH 420 + LH 41 + LH 36 + LH 29 + stand Mounting on a subwoofer KH 420 + LH 41 + LH 28 + pole + KH 870 KH 420 + LH 41 + LH 36 + LH 28 + pole + KH 870 KH 420 + LH 41 + LH 36 + LH 37 + KH 870 KH 420 + LH 41 + LH 37 + KH 870 Mounting on a wall KH 420 + LH 42 + LH 45 + wall Mounting off a ceiling KH 420 + LH 42 + LH 43 + ceiling KH 420 + LH 42 + LH 46 + ceiling Mounting on off a lighting or truss bar KH 420 + LH 42 + LH 29 + G-clamp + bar
--

KH 310 Mounting on a floor stand (e.g. K&M 26750, 26735) KH 310 + LH 25 + LH 28 + stand KH 310 + LH 41 + LH 28 + stand KH 310 + LH 41 + LH 36 + LH 28 + stand Mounting on a design monitor stand (e.g. K&M 26795) KH 310 + LH 25 + LH 48 + K&M design stand KH 310 + LH 41 + K&M design stand KH 310 + LH 41 + LH 36 + LH 48 + K&M design stand Mounting on a lighting stand KH 310 + LH 25 + LH 29 + stand KH 310 + LH 41 + LH 29 + stand KH 310 + LH 41 + LH 36 + LH 29 + stand Mounting on a subwoofer KH 310 + LH 25 + LH 28 + pole + KH 870 KH 310 + LH 25 + LH 37 + KH 870 KH 310 + LH 41 + LH 28 + pole + KH 870 KH 310 + LH 41 + LH 37 + KH 870 KH 310 + LH 41 + LH 36 + LH 28 + pole + KH 870 KH 310 + LH 41 + LH 36 + LH 37 + KH 870 Mounting on a surface (desktop or floor) KH 310 + LH 25 + surface KH 310 + LH 25 + LH 43 + surface KH 310 + LH 25 + LH 47 + LH 43 + surface KH 310 + LH 25 + LH 28 + LH 37 + LH 43 + surface KH 310 + LH 25 + LH 28 + LH 37 + LH 47 + LH 43 + surface KH 310 + LH 25 + LH 47 + LH 46 + surface KH 310 + LH 41 + LH 47 + LH 43 + surface KH 310 + LH 41 + LH 28 + LH 37 + LH 43 + surface KH 310 + LH 41 + LH 28 + LH 37 + LH 47 + LH 43 + surface KH 310 + LH 41 + LH 47 + LH 46 + surface Mounting on a wall KH 310 + LH 25 + wall KH 310 + LH 25 + LH 43 + wall KH 310 + LH 25 + LH 47 + LH 45 + wall Mounting off a ceiling KH 310 + LH 25 + ceiling KH 310 + LH 25 + LH 43 + ceiling KH 310 + LH 25 + LH 47 + LH 43 + ceiling KH 310 + LH 25 + LH 47 + LH 46 + ceiling Mounting off a lighting or truss bar KH 310 + LH 25 + LH 29 + G-clamp + bar
--

KH 150 Mounting on a floor stand (e.g. K&M 26750, 26735) KH 150 + LH 61 + LH 28 + stand Mounting on a design monitor stand (e.g. K&M 26795) KH 150 + LH 61 + K&M design stand (stand turned by 90°) KH 150 + LH 61 + LH 48 + K&M design stand Mounting on a lighting stand KH 150 + LH 61 + LH 29 + stand Mounting on a microphone stand KH 150 + LH 61 + microphone stand Mounting on a subwoofer KH 150 + LH 61 + LH 28 + pole + KH 870 KH 150 + LH 61 + LH 37 + KH 870 Mounting on a surface (desktop or floor) KH 150 + LH 61 + desktop KH 150 + LH 61 + LH 43 + desktop KH 150 + LH 61 + LH 47 + LH 43 + desktop KH 150 + LH 61 + LH 28 + LH 37 + LH 43 + desktop KH 150 + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop KH 150 + LH 61 + LH 47 + LH 46 + floor KH 150 + LH 66 + desktop KH 150 + LH 61 + table stand + desktop Mounting on an OmniMount or VESA mount KH 150 + LH 64 + OmniMount KH 150 + LH 64 + VESA mount Mounting on a wall KH 150 + LH 32 + wall KH 150 + LH 61 + LH 47 + LH 45 + wall Mounting off a ceiling KH 150 + LH 32 + ceiling KH 150 + LH 61 + ceiling KH 150 + LH 61 + LH 43 + ceiling KH 150 + LH 61 + LH 47 + LH 43 + ceiling KH 150 + LH 61 + LH 47 + LH 46 + ceiling Mounting off a lighting or truss bar KH 150 + LH 61 + LH 29 + G-clamp + bar KH 150 + LH 61 + Half coupler + bar KH 150 + LH 32 + half coupler + bar KH 150 + LH 64 + half coupler + bar KH 150 + LH 32 + LH 64 + half coupler + bar
--

KH 80 DSP / KH 120 KH 120 II Mounting on a floor stand (e.g. K&M 26750, 26735) KH80/120/120II + LH 61 + LH 28 + stand Mounting on a design monitor stand (e.g. K&M 26795) KH80/120/120II + LH 61 + K&M design stand (stand turned by 90°) KH80/120/120II + LH 61 + LH 48 + K&M design stand Mounting on a lighting stand KH80/120/120II + LH 61 + LH 29 + stand Mounting on a microphone stand KH80/120/120II + LH 61 + microphone stand Mounting on a subwoofer KH80/120/120II + LH 61 + LH 28 + pole + KH 870 KH80/120/120II + LH 61 + LH 37 + KH 870 Mounting on a surface (desktop or floor) KH80/120/120II + LH 61 + desktop KH80/120/120II + LH 61 + LH 43 + desktop KH80/120/120II + LH 61 + LH 47 + LH 43 + desktop KH80/120/120II + LH 61 + LH 28 + LH 37 + LH 43 + desktop KH80/120/120II + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop KH80/120/120II + LH 61 + LH 47 + LH 46 + floor KH80/120/120II + LH 65 + desktop KH80/120/120II + LH 61 + table stand + desktop Mounting on an OmniMount or VESA mount KH80/120/120II + LH 64 + OmniMount KH80/120/120II + LH 64 + VESA mount Mounting on a wall KH80/120/120II + LH 32 + wall KH80/120/120II + LH 61 + LH 47 + LH 45 + wall Mounting off a ceiling KH80/120/120II + LH 32 + ceiling KH80/120/120II + LH 61 + ceiling KH80/120/120II + LH 61 + LH 43 + ceiling KH80/120/120II + LH 61 + LH 47 + LH 43 + ceiling KH80/120/120II + LH 61 + LH 47 + LH 46 + ceiling Mounting off a lighting or truss bar KH80/120/120II + LH 61 + LH 29 + G-clamp + bar KH80/120/120II + LH 61 + Half coupler + bar KH80/120/120II + LH 32 + half coupler + bar KH80/120/120II + LH 64 + half coupler + bar KH80/120/120II + LH 32 + LH 64 + half coupler + bar
--